



Care instructions for Teak Wood Furniture

Your furniture is part of the solpuri teak wood range and has been crafted to a high quality. It was produced using teak wood from strictly controlled cultivation that meets the high industrial standard of outdoor products. State-controlled cultivation of the wood guarantees the sustainability of the tree population and maintains the ecosystem. Reckless felling of teak woods is prohibited.

Teak wood has the valuable characteristic of oiling itself from the inside, which means that it does not decay in normal weather conditions. After a few weeks/months of being exposed to the weather, the piece of furniture's golden appearance changes into a silver-grey patina, which does not mean that its quality or durability is diminished!

If you prefer the golden appearance to the silver-grey patina, we advise you to regularly sand the surface (1-2 times a year) using standard sandpaper (fine-grained). If there is too much moss on the wood or other stains, we recommend that you clean it using a high-pressure cleaner (low water pressure) before sanding it.

The solpuri team advises against using teak oil/grease and other cleaning agents. This would shorten the care intervals, but would not extend the durability of the piece of furniture!

Please make sure that the piece of furniture does not stand in puddles or on damp ground for prolonged periods. We recommend that you store it under a roof or protect it with a solpuri protective cover in the autumn and winter. You must ensure that the air can circulate under the cover.

Please note: solpuri GmbH and the specialist retailer assume no liability for damaged pieces of furniture if you treat them with liquid or disregard the points outlined above.

Teak wood table tops: Never store separate from base frame; they must be stored horizontally. There is a risk of the table top becoming warped.

If you care for your furniture as described above, you will enjoy your solpuri furniture for many years.

